

XE series

Micro-weighing Scale

XE is a Micro-Weighing scale with superior performance measuring up to 150~6000g weight. Operating temperature is 5°C~40°C; therefore accurate measurement is possible in any work place. Moreover, with its superior performance, various interfaces and easy power charging, therefore efficient measure is possible. the XE will be taking on a new standard of Micro-Weighing Scale.

- Superior performance (Loadcell Protection Locker, Kensington Lock , Windshield)
- Various interfaces(Remote display, IM-WORKS and various printers are connectable)
- Easy power charging (Ni-MH rechargeable battery, DRY rechargeable battery can be used)



Touchless Key




Loadcell Protection Locker



Various Interfaces



Scan with your smartphone to find more products

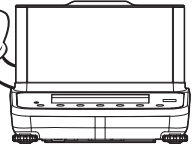

Touchless key

Loadcell Protection Locker

Various Interfaces

XE series

Micro-weighing Scale



FEATURES

- Superior performance (Loadcell Protection Locker, Kensington Lock, Windshield)
- Various interfaces(Remote display, IM-WORKS, various printers are connectable)
- Ni-MH rechargeable battery
- Compact design
- IR sensor function implementation (Touchless Key)



Touchless Key Function Using IR Sensor

Applied the IR Sensor, the XE can zero, tare and print only with hand gestures.



Loadcell Protection Locker

Fine products require precise protection. XE is holding the loadcell protection locker for safe transportation. You do not have to worry about breakage.



Various Interfaces

Remote display, printers(Dot,Ticket, label) and the IM-WORKS can be connected at the same time.

SPECIFICATIONS

Model	XE					
Max. capacity(g)	150	300	600	1500	3000	6000
e(g)	0.005	0.05	0.1	0.2	0.5	1
d(g)	0.005	0.005	0.01	0.02	0.05	0.1
External resolution	1/30,000 ~ 1/75,000					
Display digit	6 digits(Weight)					
Display type	LCD(with backlight)					
Operation temperature	5 ~ 40°C					
Power	DC 12V(with adapter)					
Platter size(mm)	150, 300, 600: Ø128mm 1500, 3000, 6000: 155 X 143mm					
Dimensions(mm)	272(W) x 180(L) x 74(H)					
Product weight(kg)	1.39					

OPTIONS

- Rechargeable Battery(Ni-MH, AA size x 4EA)
- CD-300 Remote Display
- USB Cable(B TYPE, PC Communication)
- RS-232C (Printers, PC Communication)

DIMENSIONS

