




Three Backlight Colors



Optional Light Tower

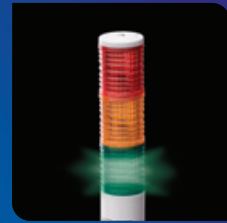

Optional Printer

EC-2 SERIES

Dual Channel Counting Scale

The EC-2 provides the features you need for counting and weighing and is available in four capacities from six to sixty pounds. Connect to a second platform to expand your capacity.

- Easily Connect to a Second Platform
- Save up to 200 Presets
- Up to 4 optional external devices can be used simultaneously



EC-2 SERIES | Dual Channel Counting Scale

SPECIFICATIONS

Model	EC2-6	EC2-15	EC2-30	EC2-60
Capacity	6 x 0.0002 lbs	15 x 0.0005 lbs	30 x 0.001 lbs	60 x 0.002 lbs
	3 x 0.0001 kg	6 x 0.0002 kg	15 x 0.0005 kg	30 x 0.001 kg
	3,000 x 0.1 g	6,000 x 0.2 g	15,000 x 0.5 g	30,000 x 1 g
Internal Res.	600,000			
External Res.	1/30,000			
Display Type	LCD			
Weigh Units	g/kg/lb			
Zero Range	±2% (Zero Range), ±10% (Initial Zero Range)			
Tare Range	Full Capacity by Subtraction			
Interface	RS-232C			
Safe Overload	120% of Capacity			
Operating Temp.	-10° C ~ 40° C / 14° F ~ 104° F			
Power	AC Adapter DC 12V / 850 mA Rechargeable Battery - 6V, 5Ah			
Battery Life	80 hrs continuous use with 12 hr recharge time			
Platter Size (in/mm)	12 (W) x 8.7 (D) / 306 (W) x 222 (D)			
Dimensions (in/mm)	13 (W) x 13.6 (D) x 4.2 (H) / 330 (W) x 346 (D) x 107 (H)			
Product Weight	9.9 lbs / 4.5 kg			

FEATURES

- Dual channel for second platform (up to 10 tons - 4 load cell platform)
- 200 Presets • Soft touch tact keyboard
- Large easy to read LCD display
- Three backlight colors as HI/OK/LO indicators
- Rechargeable Battery Included
- Lb/kg or lb/g switchable
- Accumulation mode
- Negative counting
- Key command function

OPTIONS

- Light Tower
- RP Series Remote Platform
- HFS Series Floor Scale
- DEP-50 Receipt Printer
- DLP-50 Label Printer




WEIGHT/COUNT COMPARISON FUNCTION

Set the weight or count range and the EC-2 will indicate whether the actual weight or count is HI, LO, or OK, with alarm beep sounds and color display indicators. The optional Light Tower offers a larger visual alternative.



▲ Three backlight colors

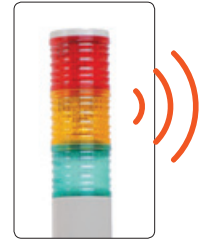

▲ Light tower

LABEL & RECEIPTS

Connect the EC-2 Dual Channel Counting Scale to the optional DEP-50 Receipt Printer or DLP-50 Label Printer. Print the data, weight, unit weight, quantity, tare, gross, item number, & item name (ASCII code).

▼ Label

Labels printed while in Accumulation Mode

▼ Ticket

DIMENSIONS

